

Installation Instructions

Lacombe Tall Sconce

Important Safety Instructions

- Turn off all power to the Junction Box before making any electrical adjustments.
- Always disconnect the power before installing/replacing bulbs, during cleaning or maintenance.
- To avoid the risk of fire, do not exceed the recommended wattage.
- Consult a qualified, licensed electrician before installation.


To Assemble

1. Install the beveled mounting plate to the J-box using the supplied mounting screw hardware (2X).
2. Hold the wall plate next to the J-Box, and connect the wires to those in the J-box using the Wago wire connectors.
3. Loosen the set screws (4X) at the 12:00 and 6:00 position on the sconce and press the sconce over the mounting disc, flush with the wall and tighten each set screw (4X).
4. Screw in the bulbs (5X).
DO NOT OVERTIGHTEN THE BULB
5. For easier installation, assemble the glass panels on a table before attaching to the fixture. Starting with the inside top row, position a top glass panel (28X) between the hanger front (42X) and hanger back (36X). Insert spacers (16X) as shown in the diagram and secure using the machine screws (84X). Repeat this process for the bottom rows using the top glass (28X) and the bottom glass panels (14X) before moving to the outer layer.
6. Turn on the power to confirm you have made good wire connections.

Care Instructions

- Wipe with a soft cloth. Do not use chemical cleaner.

*We recommend installation by a licensed electrician

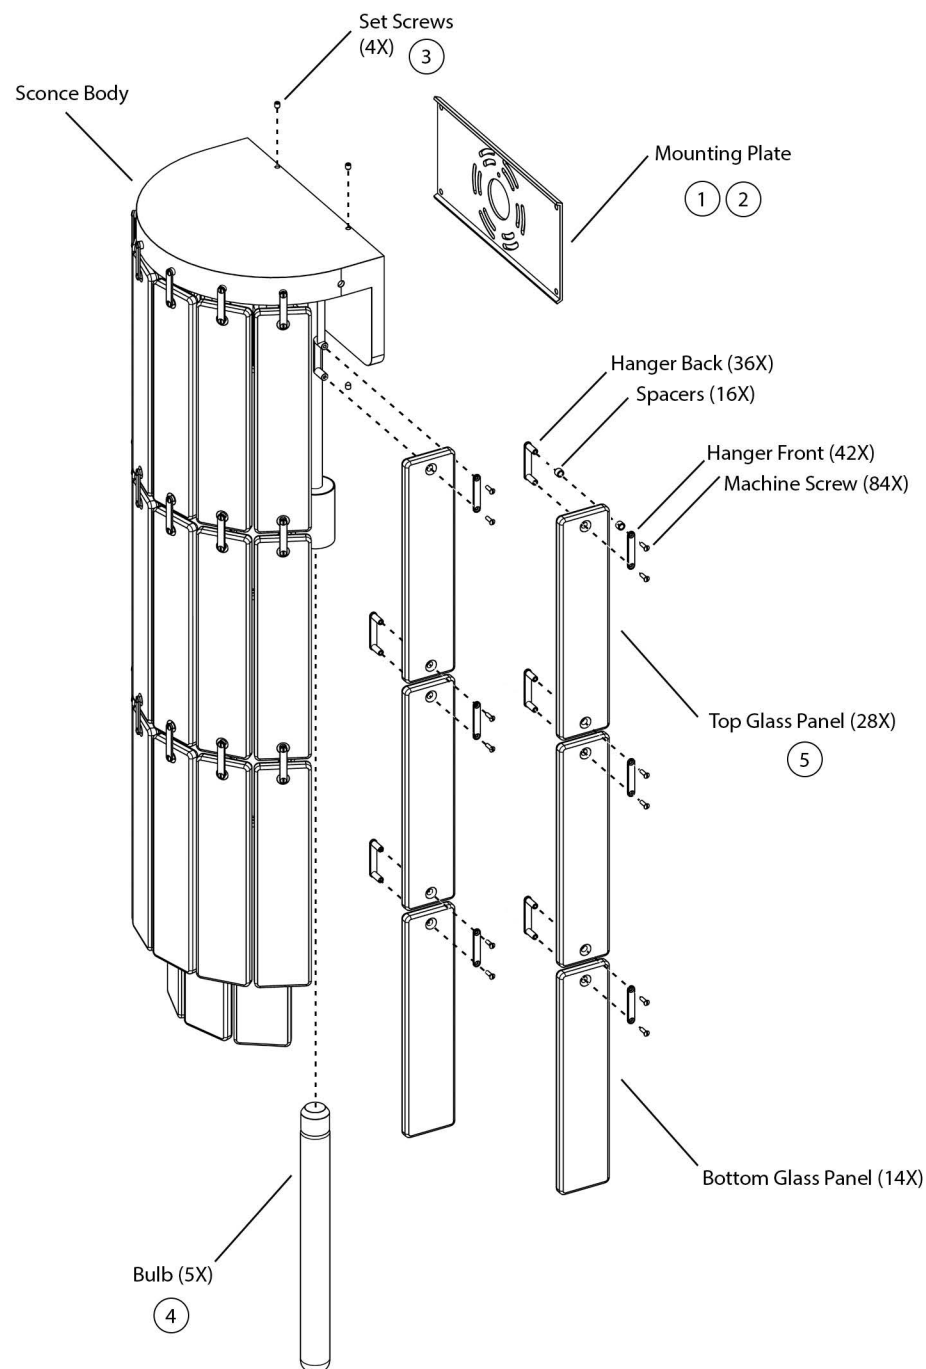

Electrical: 5 x E26 5W T9L LED bulb only