
- 4. Using the color coordinated quick connects, connect the two leads of the porcelain cone assembly to one of the arms.
- 5. Push the arm through the hole of the porcelain cone assembly and use the two set screws to fasten both parts together.
- 6. Repeat steps 5 and 6 for the remaining five arms.
- 7. Make sure the power is off before making any electrical adjustments.
- 8. Install the beveled mounting disc to the J-Box using the supplied hardware.
- 9. Position the entire chandelier over the beveled mounting disc and connect the leads to those in the J-Box with the wire nuts. Next make sure the ceiling plate is flush with the ceiling.
- 10. Using the provided allen wrench, tighten the three set screws through the ceiling plate and onto the mounting disc tightly.
- 11. Screw in each bulb and turn on the power to ensure a good wire connection. Do not overtighten the bulbs

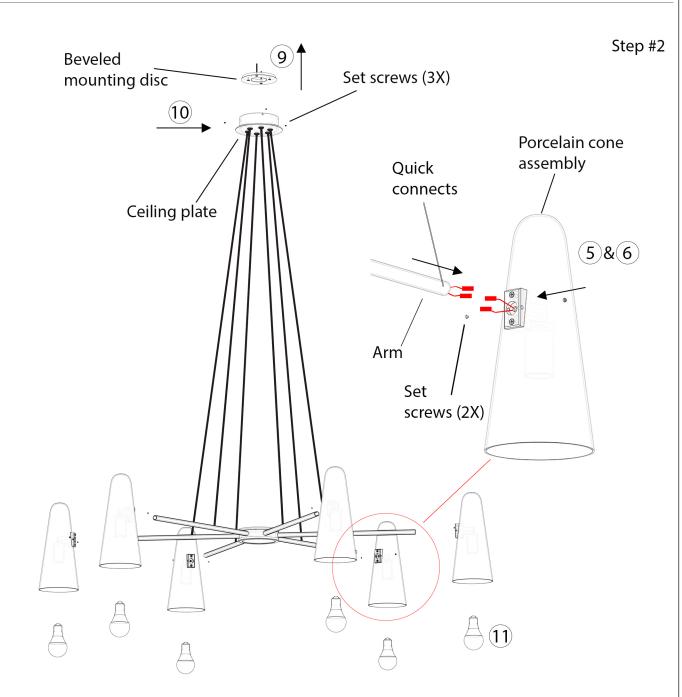



Installation Instructions

Montfaucon Circular Chandelier

Step #1

- 1. Hold the socket assembly up inside the porcelain cone so that the screw holes are aligned.
- 2. Screw in the bumper assembly with the 2 machine screws by holding it against the cone with the holes aligned. Do not overtighten.
- 3. Repeat steps 2 and 3 for the remaining five arms.

(SEE PAGE 2 FOR REMAINING STEPS)

